



SETTING UP YOUR NEGATIVE AIR SYSTEMS ZEPHYR DUST EXTRACTOR

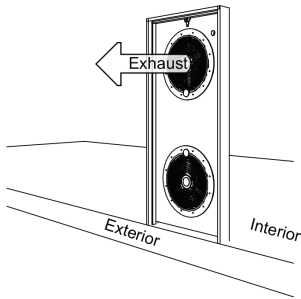

STEP 1


Place your Zephyr in an EXTERIOR door opening** with the EXHAUST side facing OUT.

***Your Zephyr can be installed against the door stop either inside or outside with the EXHAUST side facing OUT*

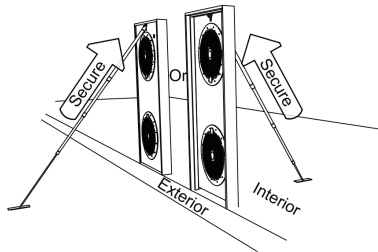


STEP 2

Secure your Zephyr FIRMLY in place PRIOR to operating. (worth mentioning twice)
Secure your Zephyr FIRMLY in place PRIOR to operating.

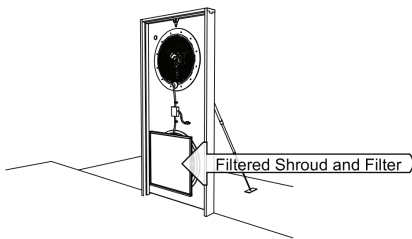

STEP 3

When operating your Zephyr in areas with overspray or dust, be sure to install your Negative Air Systems Filtered Shroud and Reusable Filter (sold separately).

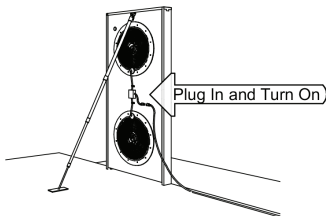

STEP 4

Plug it in and turn it on. Simple as that!

For a video tutorial and frequently asked questions, visit
WWW.NEGAIRSYS.COM

You can reach us by phone:
(770) 425-4770 or
(800) 346-6387

or by email at:
INFO@NEGAIRSYS.COM

Through passion, dedication, and innovation, our team at Negative Air Systems is continuously striving to provide quality products. Please let us know how we are doing!

